
Setup Instructions for Winegard Manual Tuning Satellite Antenna^{††} & DISH Receiver

Setup | Installation | Receiver Activation
Software Version L551RGND-N

Setup of Winegard Manual Tuning Satellite Antenna^{††} & DISH Receiver

Setup | Installation | Receiver Activation

Software Version L551RGND-N

INSTRUCTIONS

ESTIMATED SETUP TIME

STEP #1

 
DO NOT hook up your Winegard manual tuning satellite antenna at this time.

STEP #2

Power up TV and ViP®211k Receiver.

 
STEP #3

Select 'Menu' from your remote. From the Main Menu page, select '611' on your remote control number pad.

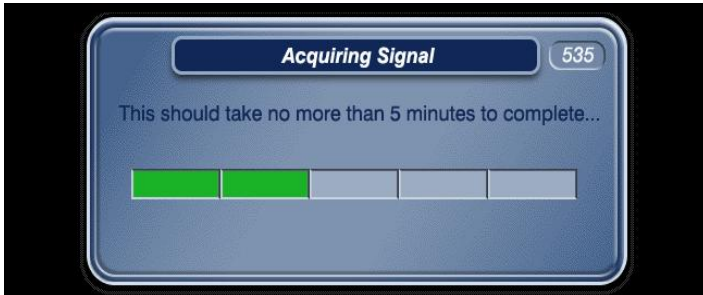

STEP #4

Point Dish – Connect your Winegard manual tuning satellite antenna to your receiver.

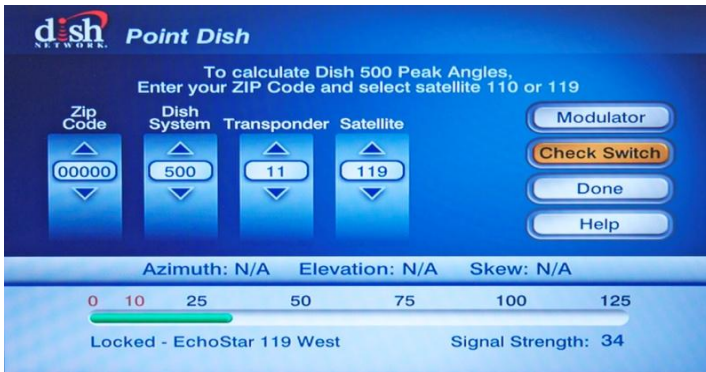

 
 
STEP #5

Point Dish – Enter your zip code using your DISH remote in the 'Zip Code' field.

- Then, select your dish system by scrolling on your DISH remote in the 'Dish System' field.
- This will give you the coordinates to position your Winegard manual tuning satellite antenna; follow those coordinates.
- The green status bar at the bottom of this screen will indicate which satellite (110, 119, 129) you have found. If it does not automatically enter the satellite information in the 'Satellite' field, enter it manually with your DISH remote.
- Select 'Check Switch'



^{††} For Winegard models: TR6100, TR6018, CarryOut MP1

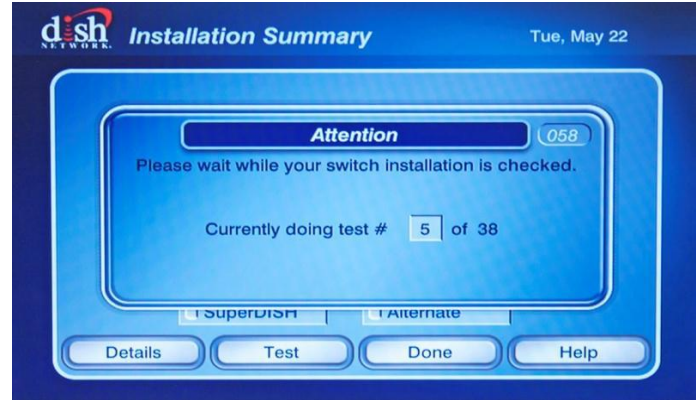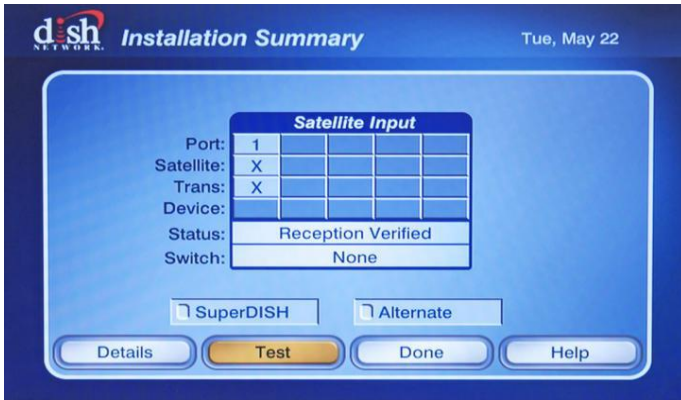Installation Summary – Select 'Test'

STEP #7

Installation Summary – Select 'Done'

If using TR6100, you should see all three satellites at this step (110, 119, 129)

 


NOTE: If you see an X in the place of the satellite information (110, 119, 129) at this step, select 'Done' and reposition your satellite antenna, following the instructions starting at Step #5.

STEP #8

Select 'Done' on your DISH remote, and then select 'Cancel' from the Main Menu three (3) times.

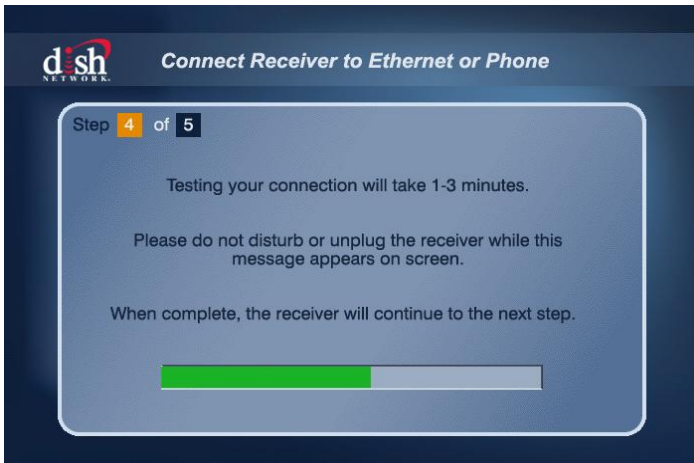

STEP #8**5 MINUTES**535 Popup: Acquiring Signal**STEP #9****10 MINUTES**Installation Wizard: Connect Receiver to Ethernet or Phone – Select 'Continue'

NOTE: Connecting Ethernet or Phone is not required; it will automatically sequence through if you choose not to connect.

STEP #10**10 MINUTES**Installation Wizard: Activate Receiver

First-Time Activation of DISH ViP®211k Receiver

To activate, call the applicable number listed below.

- New DISH Customers: 1.800.970.9623
- Existing DISH Customers: 1.888.854.9535